2006-08 ACCESSORIES AND EQUIPMENT

Interior Lights - Civic

COMPONENT LOCATION INDEX

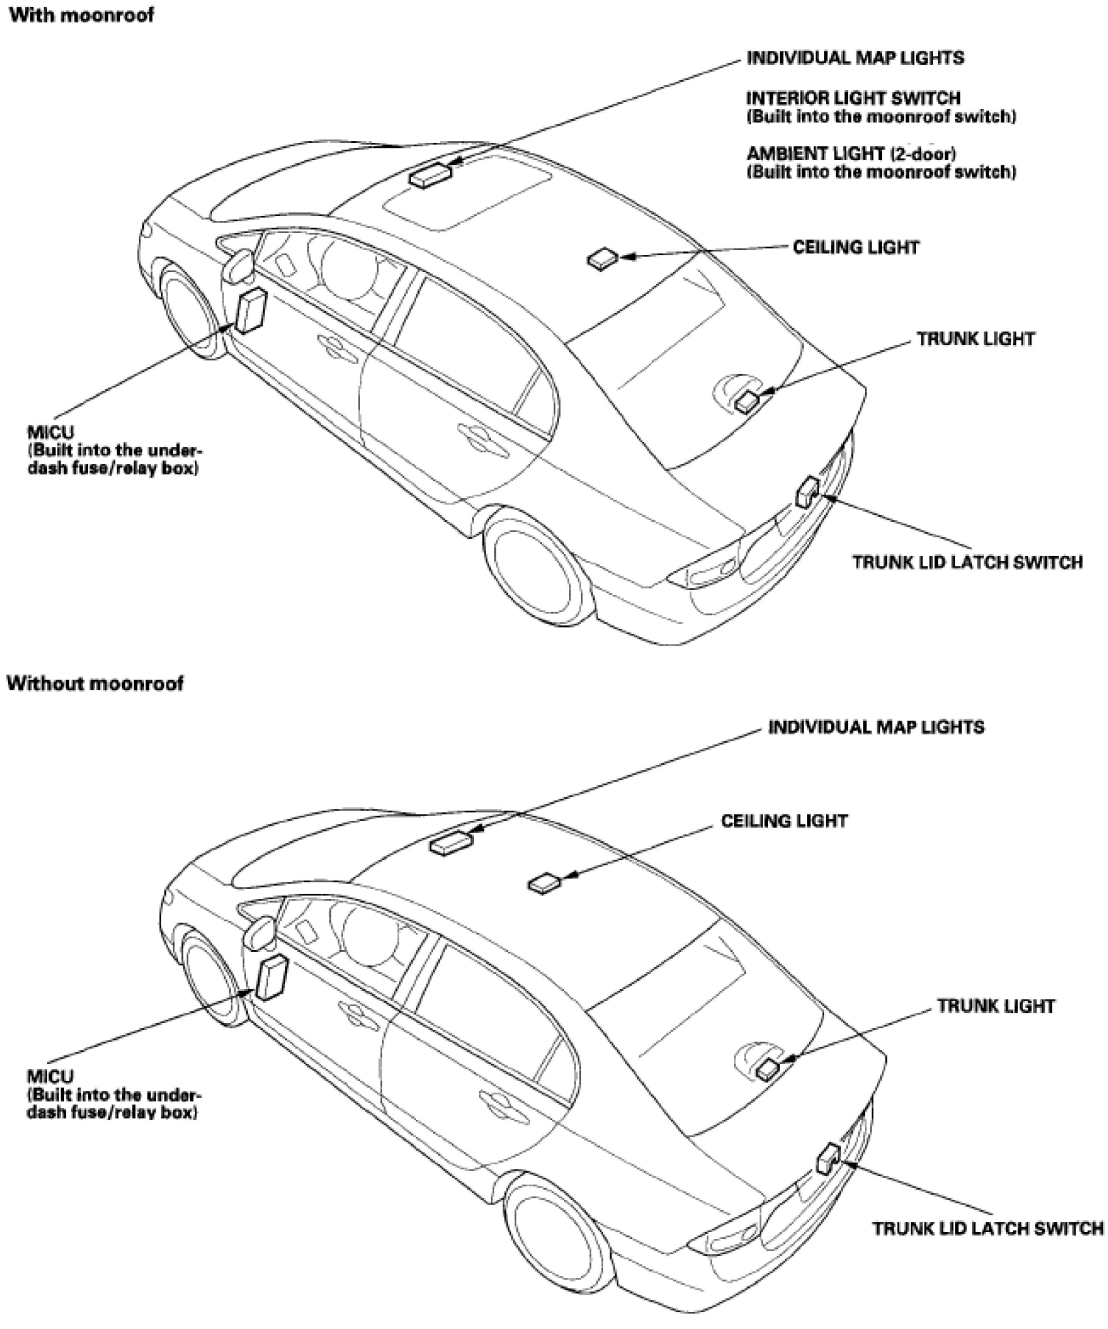

Fig. 1: Identifying Interior Lights Component Locations
Courtesy of AMERICAN HONDA MOTOR CO., INC.

CIRCUIT DIAGRAM

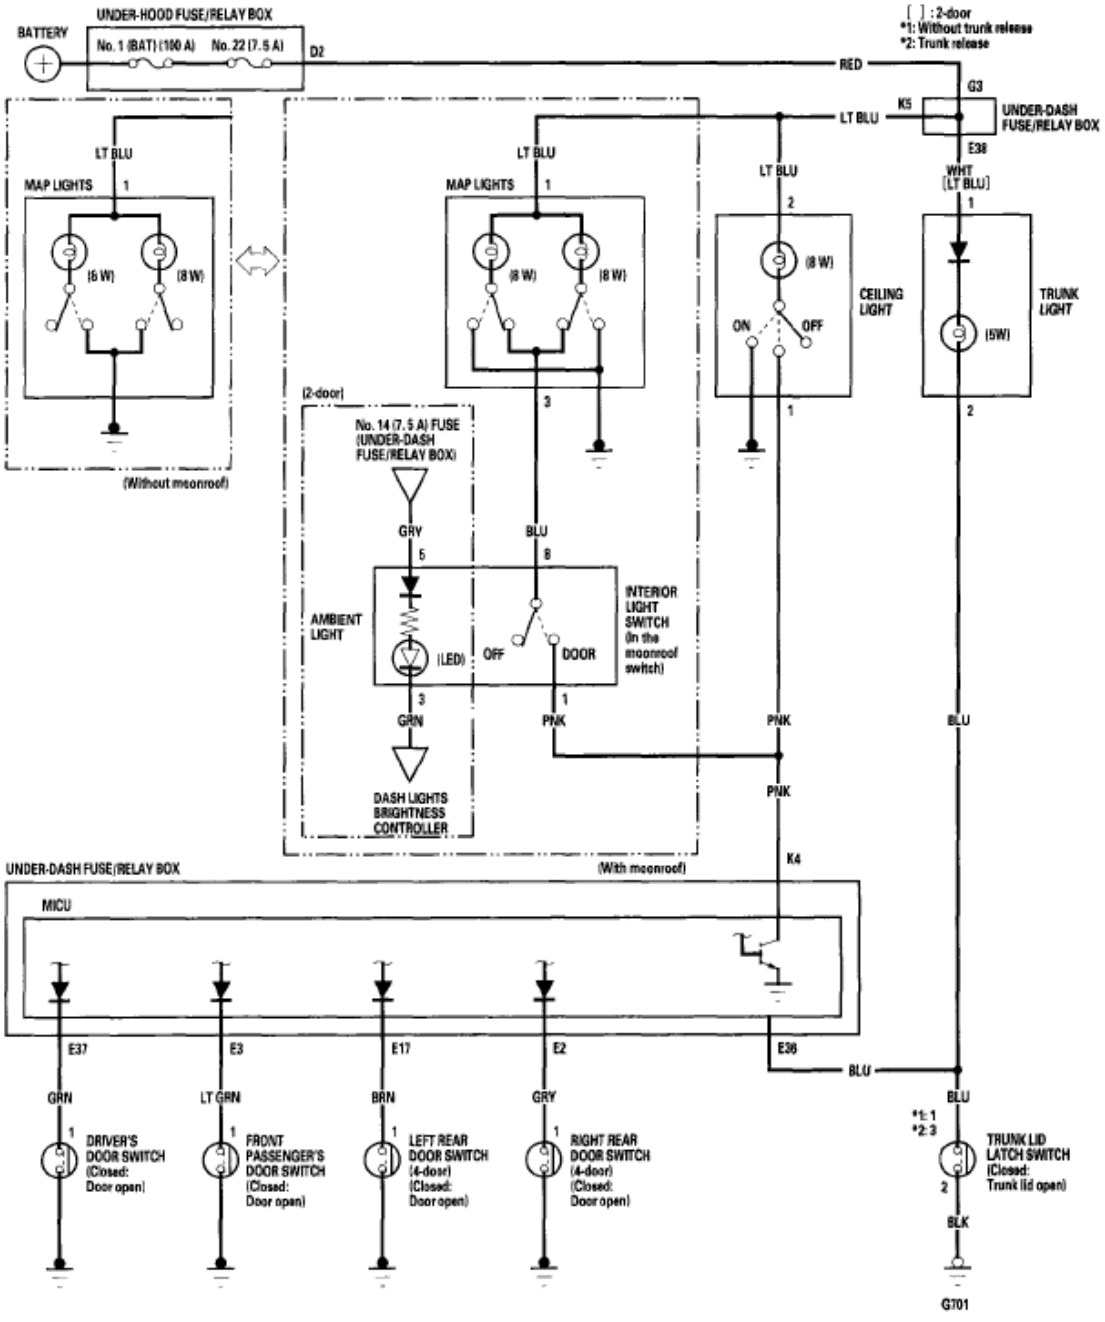

Fig. 2: Interior Lights - Circuit Diagram
Courtesy of AMERICAN HONDA MOTOR CO., INC.

FRONT INDIVIDUAL MAP LIGHT TEST/REPLACEMENT

WITH MOONROOF

1. Turn the map light switch OFF.
2. Carefully pry the lens (A) off with a small screwdriver.

Front Map Light: 8 W x 2

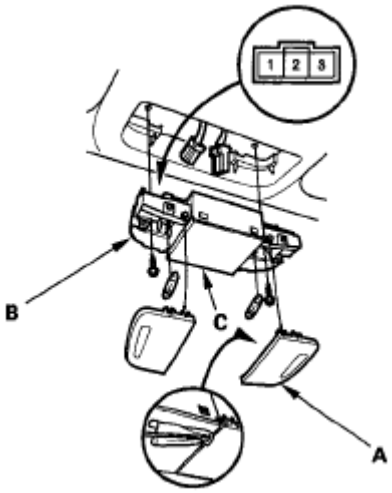

Fig. 3: Identifying Front Map Light Components
Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Remove the screws, then remove the map lights (B) and moonroof switch or navigation microphone (C).
4. Disconnect the 3P connector from the map lights and the 10P connector from the moonroof switch or navigation microphone.
5. Check for continuity between the terminals in each switch position according to the table.

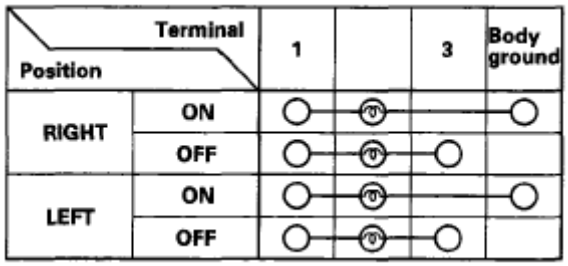

Fig. 4: Terminals Continuity Table
Courtesy of AMERICAN HONDA MOTOR CO., INC.

6. If the continuity is not as specified, check the bulb(s). If the bulb(s) are OK, replace the light assembly.
7. Install in the reverse order of removal.

WITHOUT MOONROOF

1. Turn the map light switch OFF.
2. Carefully pry the lens (A) off with a small screwdriver.

Front Map Light: 8 W x 2

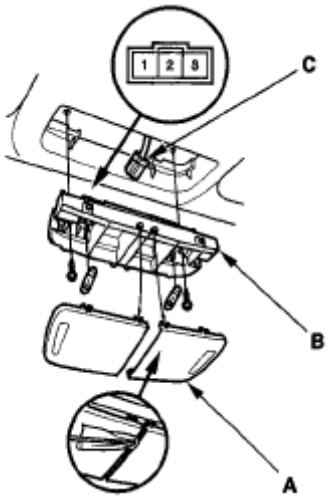

Fig. 5: Identifying Front Map Light Components
Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Remove the screws, then remove the map lights (B).
4. Disconnect the 3P connector (C) from the map lights.
5. Check for continuity between the terminals in each switch position according to the table.

Position \ Terminal		1		Body ground
RIGHT	ON	○	⏚	○
	OFF			
LEFT	ON	○	⏚	○
	OFF			

Fig. 6: Terminals Continuity Table
Courtesy of AMERICAN HONDA MOTOR CO., INC.

6. If the continuity is not as specified, check the bulb(s). If the bulb(s) are OK, replace the light assembly.
7. Install in the reverse order of removal.

CEILING LIGHT TEST/REPLACEMENT

1. Turn the ceiling light switch OFF.
2. Carefully pry the lens (A) off with a small screwdriver.

Ceiling Light: 5W

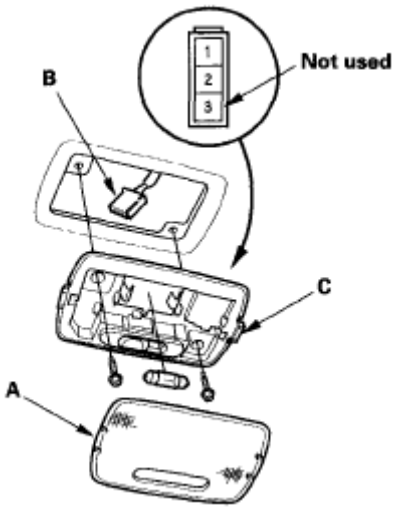

Fig. 7: Identifying Ceiling Light Components
Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Remove the screws, then remove the ceiling light (B).
4. Disconnect the 3P connector (C) from the ceiling light.
5. Check for continuity between the terminals.
   - There should be continuity between the No. 1 and No. 2 terminals with the switch in the MIDDLE position.
   - There should be continuity between the No. 2 and No. 3 (Body ground) terminals with the switch in the ON position.

- There should be no continuity between the No. 1 and No. 2 terminals, and between the No. 2 and body ground with the switch in the OFF position.

6. If the continuity is not as specified, check the bulb. If the bulb is OK, replace the light.
7. Install in the reverse order of removal.

TRUNK LIGHT TEST/REPLACEMENT

1. Open the trunk lid.
2. Carefully pry out the trunk light (A).

Trunk Light: 5 W

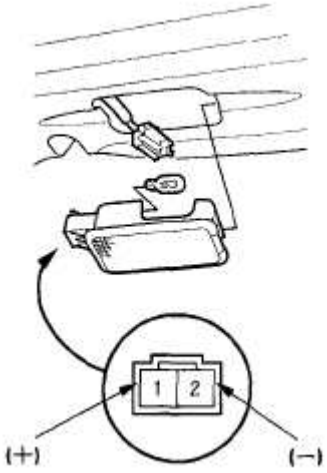

Fig. 8: Identifying Trunk Light Components
Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Disconnect the 2P connector (B) from the light.
4. Check for continuity between the No. 1 (+) and No. 2 (-) terminals. There should be continuity. If there is no continuity, check the bulb. If the bulb is OK, replace the trunk light assembly.
5. Install in the reverse order of removal.

TRUNK LID LATCH SWITCH TEST

1. Open the trunk lid.

2. Disconnect the connector (A) from the trunk lid latch assembly (B).

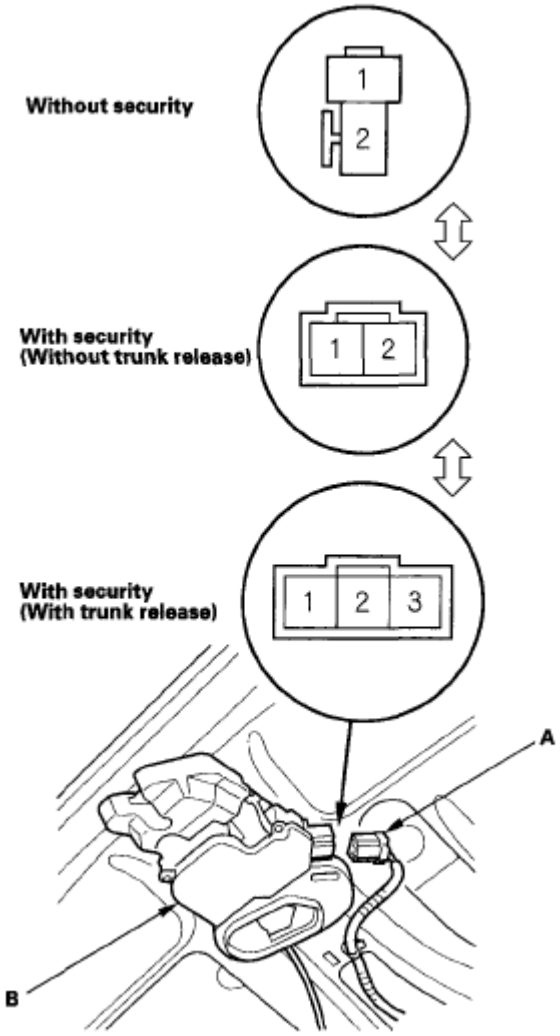

Fig. 9: Identifying Trunk Lid Latch Assembly Connector
Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Check for continuity between the No. 1 [No. 3] and No. 2 terminals.

   [ ] : With trunk release

   - There should be continuity with the trunk lid open.
   - There should be no continuity with the trunk lid closed.
4. If the continuity is not as specified, replace the trunk lid latch assembly.

INTERIOR LIGHT SWITCH TEST/REPLACEMENT

WITH MOONROOF

NOTE: The interior light switch is built into the moonroof switch, and it switches the front individual map lights between the OFF and DOOR positions.

1. Remove the front individual map lights (see **FRONT INDIVIDUAL MAP LIGHT TEST/REPLACEMENT**).
2. Disconnect the moonroof switch 10P connector (A) and map light 3P connector (B).

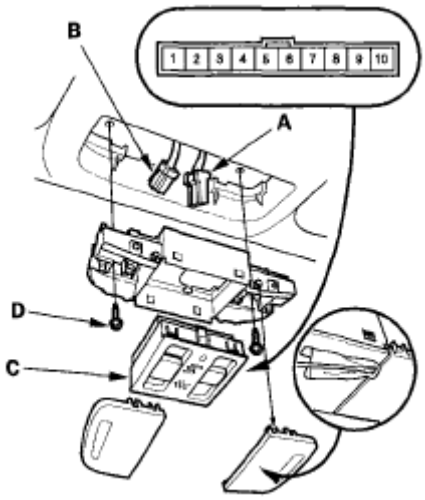

Fig. 10: Identifying Moonroof Switch 10P Connector And Map Light 3P Connector
Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Remove the moonroof switch (C).
4. At the moonroof switch 10P connector, check for continuity between the No. 1 and No. 8 terminals.
   - There should be continuity when the interior light switch is in the DOOR position.
   - There should be no continuity when the interior light switch is in the OFF position.

5. If the continuity check is not as specified, replace the illumination bulb (D) or the switch.
6. Install the switch and light in the reverse order of removal.

AMBIENT LIGHT REPLACEMENT

NOTE: The ambient light is built into the moonroof switch.

2-DOOR WITH MOONROOF

1. Remove the front individual map lights (see **FRONT INDIVIDUAL MAP LIGHT TEST/REPLACEMENT**).
2. Disconnect the moonroof switch 10P connector (A) and map light 3P connector (B).

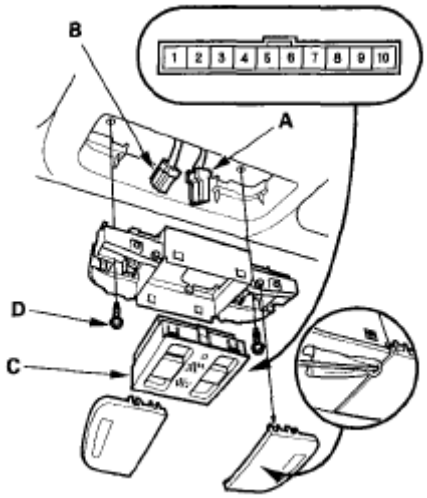

Fig. 11: Identifying Moonroof Switch 10P Connector And Map Light 3P Connector
Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Remove the moonroof switch (C).
4. Install the switch and light in the reverse order of removal.